


SECTION A-A

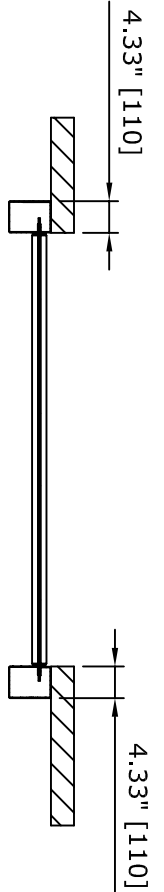

= SPACE REQUIRED FOR MAINTENANCE AND INSTALLATION

TABLE "A"

| BOTTOM BEAM CONFIGURATION | DIM. A |
|---------------------------|--------------|
| PRE-RUNNING PHOTOCELL | 16.14" [410] |
| SAFETY EDGE | 18.50" [470] |